

Dear Customer,

Quality has always been our driving force and founding Argon Audio is a natural extension of this philosophy. We have 20 years' experience in creating and specifying high quality products, manufacturing them and selling them on to end users with **Value-for-Money** as the primary aim.

And Argon Audio is a brand fully compliant with these values. Design, features and quality standards are all specified in Denmark and manufacturing takes place in the Far East, where quality vendors are highly competitive - and as a result supply outstanding **Value-for-Money** products – to the delight of both ourselves and our customers!



Congratulations with your new Argon DAB+ Adaptor.

Content

| | | |
|----------|--|----------|
| 1 | Introduction | page 3 |
| 1.1 | Safety | page 3-5 |
| 1.2 | Contents of the box | page 5 |
| 2 | Usage, controls and connections | page 6-7 |
| 3 | Using Your Argon DAB+ Adaptor | page 8 |
| A | "Power" button | page 8 |
| B | "Tune" buttons | page 10 |
| C | "Menu" button | page 10 |
| D | "Snooze" button | page 10 |
| E | "Display" button | page 10 |
| F | "Sleep" button | page 11 |
| G | "AutoScan" button | page 11 |
| H | "Clock" button | page 12 |
| I | "Alarm" button | page 12 |
| J | "Preset" buttons (1-6) | page 13 |
| K | "Volume" buttons | page 13 |
| L | Resetting Your DAB+ Adaptor and New Stations | page 13 |
| 4 | General Specifications | page 14 |
| 5 | DAB Frequency list | page 14 |

1. Introduction

1.1 Safety

Safety instructions

WARNING

To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user of the presence of un-insulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute risk of electric shock to a person.

The exclamation point within an equilateral triangle is intended to alert user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.



Read Instructions

Read all safety and operating instructions before operating the product.

Retain Instructions

Keep all safety and operating instructions for future reference.

Heed Warnings

Take note of all warnings on the product and in the operating instructions.

Follow Instructions

Follow all operating and usage instructions.

Cleaning

Unplug this product from the power source before cleaning. Do not use liquid or aerosol cleaners.

Use a damp cloth for cleaning.

Attachments.

Do not use attachments of accessories not recommended by us as they may cause hazards.

Water and Moisture

Do not use this product near any water source or water hazard.

Placement

Place the product on a stable surface or recommended stand, otherwise the product may fall and cause injury to a person, and damage to the product.

Follow the manufacturers instructions for mounting the product.

Ventilation

To ensure reliable operation and to prevent overheating, do not block or cover ventilation openings and slots with fabrics or impermeable material Do not place in a built-in installation such as a bookcase or rack unless there is proper ventilation or our instructions have been adhered to.

Heat

Do not place this product anywhere near heat sources such as radiators, stoves, and other products (including amplifiers) that produce heat.

Power Sources

This radio is specifically designed for operation within the electrical range(s) specified on the provided power adapter and use outside of this range shall be at your own risk. Please contact your local electric utility company if you have any questions about the electrical voltage at your intended location of use.

Power-cord Protection

Arrange the power-cord to minimize the risk of damage from traffic or other hazards. Pay particular attention to the area near the plug head, the power source outlet and the connection from the product.

Lightning

Unplug the product from the power source during lightning storms or if unused for long periods of time. This will prevent lightning and power-line surge damage to the product.

Overloading

Do not overload wall outlets, extension cords, or integral power circuits as this can result in a risk of fire or electric shock.

Object and Liquid Entry

Never push any object through the product openings, as this can result in a fire, electric shock or damage. Do not spill liquids on the product.

Servicing

Do not attempt to service the product yourself. Refer all servicing to qualified service personnel.

Damage Requiring Service

Call for servicing when:

- a) the power-supply cord or plug is damaged.
- b) objects have fallen through or liquids have been spilled into the product openings.
- c) the product does not operate normally when following the operating instructions.
- d) the product has been dropped or damaged in any way.

1.2 Contents of the box;



- ARGON DAB+ Adaptor
- DC5V 1A Power adapter
- User manuals different languages.

We recommend that you keep the original box and packing material for future transportation.

We also recommend that you keep this User Manual.

2. Usage, controls and connections

This chapter describes and shows you the location of the various controls and connections on your Argon DAB+ Adaptor.

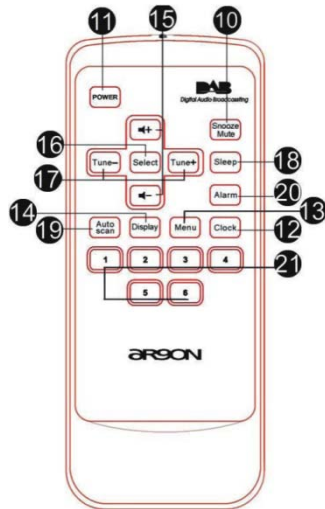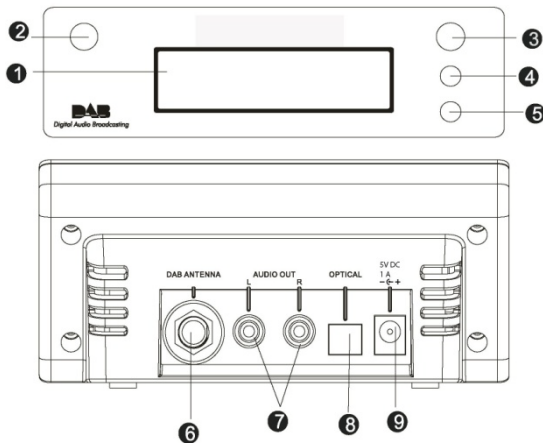

| Functions and connections | Description |
|---------------------------------|---|
| 1. LCD display | The display of the adaptor |
| 2. Reciever | remote control reciever eye |
| 3. Power button | Press the button for 3 sec. To turn on/off |
| 4. Tune + | Press to choose stations |
| 5. Tune - | Press to choose stations |
| 6. Antenna connection | Antenna is connected here. Either your own choice of antenna or the antenna that comes with the adaptor |
| 7. Audio out connection | Use RCA/stereo phono cable to connect the Adaptor to your Hi-Fi system |
| 8. Digital audio out connection | Use this connection if you have a Amplifier with Digital input |
| 9. Power connect | Connect the power supply here |
| 10. Snooze/mute button | Press to temporarily turn off alarm or press to mute sound |
| 11. Power button | Press to enable Stand-by or Power-on of the Adaptor |
| 12. Clock button | Press to adjust the clock |
| 13. Menu button | Press to enter the Main Menu |
| 14. Display button | Press to change between Menu information |
| 15. Volume button | Press + or - to adjust volume up or down |
| 16. Select button | Press once to use as "enter" button |
| 17. Tune button | Press to change station |
| 18. Sleep button | Press to activate and adjust when the Adaptor should turn off automatically |
| 19. Autoscan button | Press to search for stations. Press and hold 5 sec. To make a full-scan of stations |
| 20. Alarm button | Press to set the alarm timer |
| 21. Preset button | Press either number to get saved stations or hold for 5 sec to save station playing. |

3. Using Your Argon DAB+ Adaptor

Notice: Most of the controls and functionality for the DAB+ Adaptor are on the Remote control only. The usage of controls and buttons in this manual refer to the Remote control unless otherwise stated.

A. Power button on the Unit and on the Remote


When connected to a Power outlet the Display on the Argon DAB+ Adaptor, will show similar to figure 3-1.



**Argon
DAB Adaptor**

Figur 3-1

After app. 3 seconds the Argon DAB+ Adaptor automatically goes into auto tune process. The Display will show similar to figure 3-2.

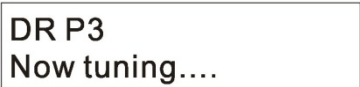

**DR P3
Now tuning....**

Figur 3-2

When stations are found during the auto tune process, the Display similar to figure 3-3 will appear. (In the figure below the units has found the station DR P3 – a Danish broadcast in Denmark only).



DR P3

Figur 3-3

If no stations are found during the auto tune process the Display similar to figure 3-4 appears.



No stations
Available

Figur 3-4

By pressing the “**Power**” button on the Unit or on the Remote you switch between Power ON or Standby.

B. "Tune" buttons on the Unit and on the Remote

By pressing the "Tune +/-" buttons you can choose the station you want to listen to.

C. "Menu" button

The Menu button allows you to see different kind of Display information.

To activate Menu:

Use the remote control - Press "**Menu**" button followed by press "**Display**" once.

Hereafter by pressing the "**Display**" button continually, different Display information will appear

"Menu" information shown contains; Reset function, SW version, Date/time, Program type, Bit rate, Scrolling Radio text, Station frequency and Station name.

Information shown in the Display will change by a press on the "**Display**" button.

Some information shown in the Display, during use of Menu function, can be accessed for further information or it can be changed. To access further in the information Displayed press "**Select**" on the Remote.

D. "Snooze" button

- (1) Pressing the "**Snooze**" button will mute the sound, to turn off the mute function, press the "**Snooze**" button again.
- (2) If the DAB+ Adaptor is in Alarm mode, you can press the "**Snooze**" button on the remote control to put the unit in to snooze mode.

E. "Display" button

The Display button is used to navigate through the different Display information once "Menu" function is activated. (See point C "Menu button").

F. "Sleep" button

The Sleep function can be set to turn the DAB+ Adaptor off automatically after a predefined time.

The Sleep function turn-off-time is set the following way:

Press and hold "**Sleep**" button for 3 sec.

Press "**Tune + or -**" to select ON or OFF


Confirm by pressing "**Select**"

Press "**Tune + or -**" to Sleep time

Confirm the wished Sleep time by pressing "**Select**".

G. "AutoScan" button

By pressing "**Autoscan**" the DAB+ Adaptor will automatically scan for new stations. Display will show scanning status as in fig 3-5

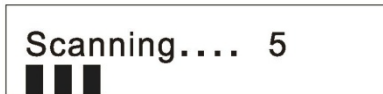

Figur 3-5

There are two Auto scan options:

- (1) Auto tune local: Scan all frequencies in the national channel allocation. This should take only a few seconds to do.
Local auto tune is activated by a short press on the "**Auto scan**" button.
- (2) Auto tune full: Scan the full range of all digital frequencies. This may take a few minutes.
Full auto tune is activated by pressing and holding the "**Auto scan**" button for 3 sec.

H. "Clock" button

This button allows You to manually set the Time, Date and Year.

Press the "Clock" button and Year, Date and Time will appear in the Display.

"Year" will start flashing as the first. Change/choose the right "Year" by using "**Tune +/-**", when the right year appear in the Display, press "**Select**". Continue the same process with Date and Time".

I. "Alarm" button

To Set the Alarm. Press and hold "**Alarm**" button for 3 sec.

Press "**Tune +/-**" to select "Alarm1" or "Alarm2".

Confirm Your selection by pressing "**Select**".

Next appears: "OFF", Choose either "ON" or "OFF" by using "**Tune +/-**".

Confirm your selection by pressing "**Select**".

Next appears: "Daily", by using the "**Tune +/-**" You can choose either: "Daily", "Date", "Week Day", "Weekend", "Weekly" or "Once".

Confirm Your selection by pressing "**Select**".

Use the "**Tune +/-**" to adjust the settings for the choice you make above.

Confirm Your selection by pressing "**Select**".

Finally appears: "Buzz", by using the "**Tune +/-**" You can choose either: "Buzz" or "Radio".

Confirm Your selection by pressing "**Select**".

Notice: if you have chosen "Radio" it will restart in Alarm mode on the Radio Station last used before you turned off the Unit.

J. "Preset" buttons (buttons numbered 1-6)

Pressing one of the numbered buttons can either Store or Recall a previously stored station.

(1) To store a Station.

Once listening to the Station you want to Store, decide under which preset (number) You want to Store the Station.

Press and Hold this "**Numeric**" button of your choice for 3 seconds and the Stations will be Stored.

You can do so for up to 6 stations. One station for each Numeric number on the Remote can be stored.

(2) To Recall a Station.

Simply press the "**Numeric**" number on the Remote that corresponds with the Station you want

K. "Volume" buttons (+/- or up down)

Press either "+ or -" volume to increase or decrease the volume. The display will show the volume.

Notice: that the volume set on Your amplifier (where the DAB+ Adaptor is connected) will be the maximum volume level the DAB+ adaptor can play when at full level (full volume level of the DAB+ Adaptor is "20")

L. Resetting Your DAB+ Adaptor and New Stations

If you change location (move to another place) or want to add new Stations, in case more stations have become available, You should Reset the DAB+ adaptor.

By resetting the DAB+ adaptor it will automatically find all new Stations and remove possible obsolete Stations at the same time. It will also search for Station on a new frequency in case you have moved.

Reset of the DAB+ adaptor is done by:

Press "**Menu**" once followed by pressing "**Display**" once (reset info will appear in the display), press "**Select**" to confirm reset.

The DAB+ adaptor will automatically start up and do a full scan for stations.

Notice: when doing a Reset you will delete all preset station and Alarm setting previous made.

4. General Specifications

Frequency range – DAB Band III: (174~240MHz)

LCD display: 16x2 characters.

Input voltage: 5V DC/1A.

Audio out: Optical Digital and analogue RCA stereo connection to external Amplifier.

Dimensions and weight (WxHxD): 140mmx63mmx63mm **Weight:** 0,66 kg

5. DAB Frequency list

| Frequenz-block | Frequenz (MHz) | Frequenz-block | Frequenz (MHz) | Frequenz-block | Frequenz (MHz) |
|----------------|----------------|----------------|----------------|----------------|----------------|
| 5A | 174,928 MHz | 8C | 199,360 MHz | 11C | 220,352 MHz |
| 5B | 176,640 MHz | 8D | 201,072 MHz | 11D | 222,064 MHz |
| 5C | 178,352 MHz | 9A | 202,928 MHz | 12A | 223,936 MHz |
| 5D | 180,064 MHz | 9B | 204,640 MHz | 12N | 224,096 MHz |
| 6A | 181,936 MHz | 9C | 206,640 MHz | 12B | 225,648 MHz |
| 6B | 183,648 MHz | 9D | 208,064 MHz | 12C | 227,360 MHz |
| 6C | 185,360 MHz | 10A | 209,936 MHz | 12D | 229,072 MHz |
| 6D | 187,072 MHz | 10N | 210,096 MHz | 13A | 230,784 MHz |
| 7A | 188,928 MHz | 10B | 211,648 MHz | 13B | 232,496 MHz |
| 7B | 190,640 MHz | 10C | 213,360 MHz | 13C | 234,208 MHz |
| 7C | 192,352 MHz | 10D | 215,072 MHz | 13D | 235,776 MHz |
| 7D | 194,064 MHz | 11A | 216,928 MHz | 13E | 237,488 MHz |
| 8A | 195,936 MHz | 11N | 217,088 MHz | 13F | 239,200 MHz |
| 8B | 197,648 MHz | 11B | 218,640 MHz | | |